



Samsung NX3000 Battery Replacement

This guide will show you how to replace the battery in the Samsung NX3000.

Written By: Kelsea Weber




INTRODUCTION

Camera not turning on? The battery may need to be recharged or replaced. Use this guide to replace the battery and get back to taking awesome photos!

Step 1 — Battery



- If you haven't done so already, remove the lens from the camera.
- Turn the camera upside down.
- Slide the button to the left to open the battery compartment.
- Push the blue button up to release the battery.

 The battery is not shown in these photos.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:32:36 AM.